


INSTALLATION PROCEDURE
(DRUM HEATER)

1. WRAP AND CLAMP AROUND DRUM PRIOR TO SWITCHING ON.
2. PULL ON SPRING, AT THE SAME TIME, HOLD HOOK END OF HEATER AGAINST THE DRUM.
3. PLACE A LOOP OF THE SPRING OVER THE HOOK AS SHOWN ABOVE.
4. HEATER MUST NOT BE CLAMPED IN DENTED AREAS OF THE DRUM.
5. HEATER MUST BE IN FULL CONTACT WITH THE DRUM AND BELOW THE LEVEL OF LIQUID WHILE IN OPERATION.
6. DO NOT BEND HEATER SHARPLY AS THIS MAY CAUSE INTERNAL DAMAGE TO THE HEATING ELEMENT.
7. OPEN DRUM TO ALLOW FOR EXPANSION WHEN HEATING.
8. DO NOT USE OUTSIDE INSULATION.

OPTIONAL THERMOSTAT

AN OPTIONAL ADJUSTABLE THERMOSTAT MAY BE ATTACHED TO THE HEATER. THE TEMPERATURE CAN BE INCREASED BY TURNING THE SHAFT CLOCKWISE OR DECREASED BY TURNING THE SHAFT COUNTER CLOCKWISE (AS SHOWN).

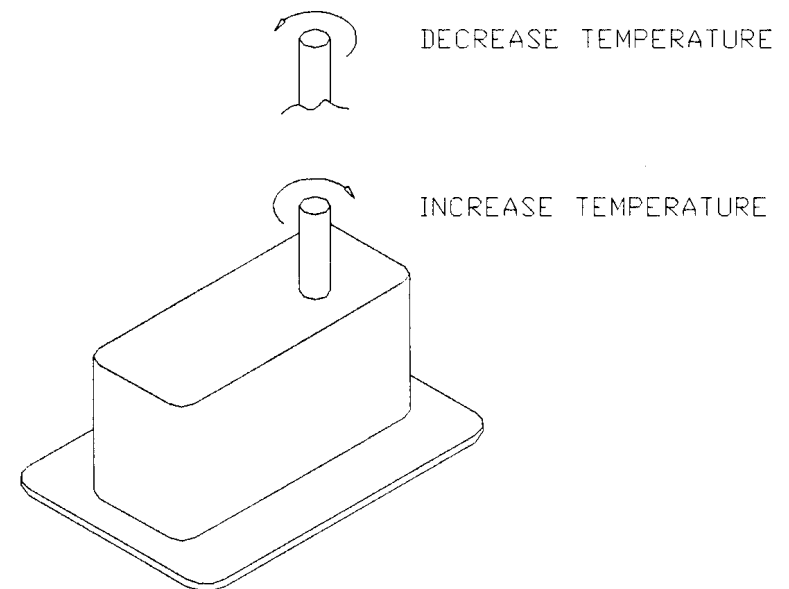

HEATERS ARE AVAILABLE FOR OTHER DRUM HEATING APPLICATIONS, CONSULT FACTORY